

930NH-5606 FLASH PATTERN

LIGHTBAR LAMP CONFIGURATION

DF3	DF2	DF1	PF1	PF2	PF3
DC					PC
DA					PA
DR3	DR2	DR1	PR1	PR2	PR3

MODE	CONTROL WIRES ACTIVATED	LAMP OPERATION	
		REAR / ALLEY STROBES & HALOGENS	FRONT / CORNER STROBES & HALOGENS
0	NONE	NONE	NONE
1	ORG	DR2 & DR3 SIMULTANEOUS AND ALTERNATE WITH PR2 & PR3 SIMULTANEOUS	NONE
2	ORG & BLU	DR2, DR3 & PA SIMULTANEOUS AND ALTERNATE WITH PR2, PR3 & DA SIMULTANEOUS	DF2 & DF3 SIMULTANEOUS AND ALTERNATE WITH PF2 & PF3 SIMULTANEOUS
3	ORG & BLU & WHT/BLK	SAME AS MODE 2	DF2, DF3 & PC SIMULTANEOUS AND ALTERNATE WITH PF2, PF3 & DC SIMULTANEOUS
4	BLU (STROBES ONLY)	DR3 & PA SIMULTANEOUS AND ALTERNATE WITH PR3 & DA SIMULTANEOUS	DF3 ALTERNATES WITH PF3
5	WHT/BLK (HALOGENS ONLY MODE 1)	DR2 ALTERNATES WITH PR2	NONE
6	ORG & WHT/BLK (HALOGENS ONLY MODE 2)	DR2 ALTRNATES WITH PR2	DF2 & PC SIMULTANEOUS AND ALTERNATE WITH PF2 & DC SIMULTANEOUS

CONTROL WIRES FOR OPTIONAL HALOGENS

CONTROL WIRE ACTIVATED	HALOGEN LAMP
RED/WHITE	PF1 (TAKEDOWN)
BROWN	DF1 (TAKEDOWN)
BROWN/WHITE	PR1 (REAR WORK)
GRAY	DR1 (REAR WORK)
YELLOW	DA & PA (ALLEY LAMPS)

**NOTE: GREEN control wire activates high intensity to strobes.
Apply +12vdc to appropriate control wire to activate desired function.**