

**950N-4805 NEOBE LIGHTBAR**  
0011 - **FACTORY SETTING FLASH PATTERN**

Progressive Slide Switch application

**Mode 1**

+12 vdc **ORANGE** Control Wire Activated

Front & Corner Warning Lamps: *Inboard/Outboard without Corner - 6 pulse Neobe*

Rear & End Warning Lamps: *End Only - 6 pulse Neobe*

**Mode 2**

+12 vdc **ORANGE & BLUE** Control Wires Activated

Front & Corner Warning Lamps: *Off*

Rear & End Warning Lamps: *Inboard/Outboard without End - 6 pulse Neobe*

**Mode 3**

+12 vdc **ORANGE, BLUE & WHITE/BLACK** Control Wires Activated

Front & Corner Warning Lamps: *Inboard/Outboard with Corner - 6 pulse Neobe*

Rear & End Warning Lamps: *Inboard/Outboard with End - 6 pulse Neobe*

**Traffic Directional Modes on Rear Lamps - Left, Right or Center Out - 6 pulse Neobe**

Front Warning Lamps: *Inboard/Outboard without Corner - 6 pulse Neobe*

**Any other combinations of the ORG, BLUE and WHITE/BLACK control wires = OFF.**

**See 950N-4805 Appendix A for additional 950N-4805 Control & Power Wire functions.**